


Quick Start Guide

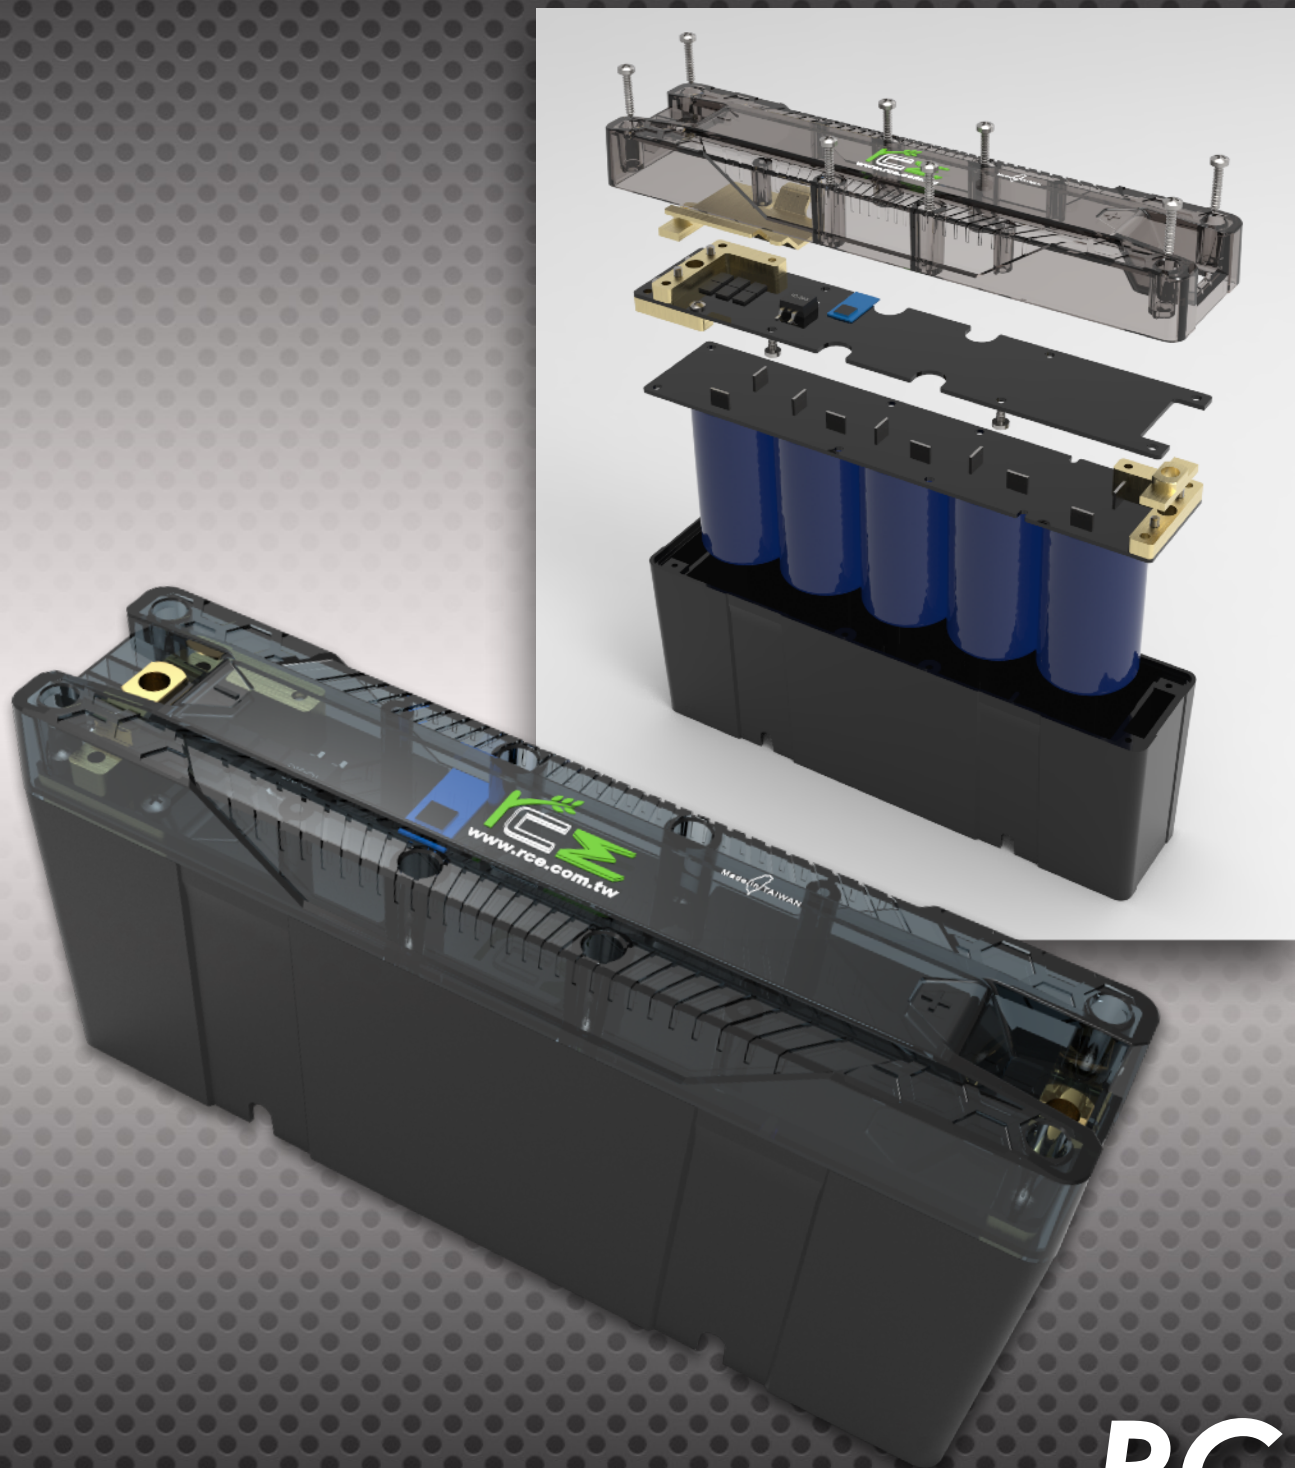

RCE
Car Super Capacitor II

SC-1586 Car Super Capacitor II



Product specifications

- Product ID : SC-1586
- Capacity : 15V / 86F
- Self-discharge current : <1.5mA
- Applicable temperature : -30° ~ +70°C
- Instantaneous current : 230A /15V/1S
- Dimension : 210mm*96mm*48mm
- Weight : 1000g
- Warranty : 1 year

This product's low-power Bluetooth module has been certified by the NCC National Communication and Communication Commission CCAF22Y10050T6

Car super capacitor installation instructions


1. **Please shut off the engine during the installation.** Then connect the positive and negative wire to the car battery.



2. Please connect the EC5(blue) connector to the Super Capacitors.



3. Please wait for 15minutes for the Super Capacitors to pre-charge.

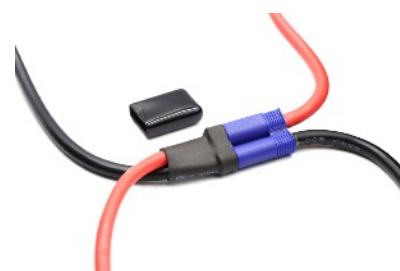

iBatt user's guidance

App download

Download App on Phone

Please download the iBatt App according to the following information and complete the registration.



iBatt user's guidance

Account registration


App operation instructions 1

Please register a iBatt account on the login page.



App operation instructions 2

Enter a valid email address as the user account.

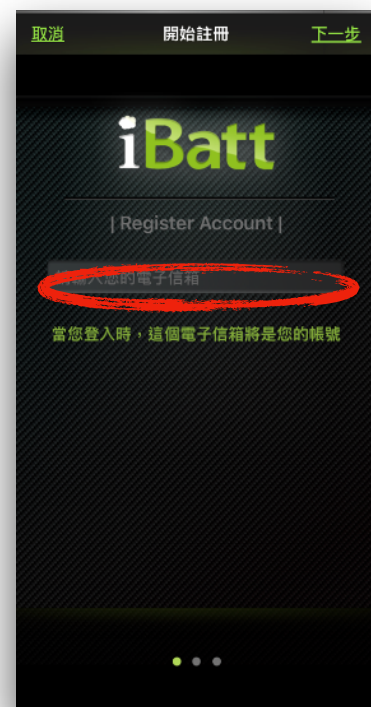

App operation instructions 3

Insert your email address as login account and confirm your password twice.



App operation instructions 4

Registration is complete!



App operation instructions 5

Login with the account you just registered.



App operation instructions 6

Please go to the setting page at the bottom right corner then press "Add new battery and model"



App operation instructions 7

Please insert the serial numbers of your RCE battery or Super Capacitors. You can also scan the QR code instead of typing.



iBatt user's guidance

Bluetooth connection

App operation instructions 8

Please switch back to the Main tab and tap the Bluetooth icon at the top right corner. You should see a device near you which is available to connect.



App operation instructions 9

You should see a device near you which is available to connect. Once it is connected you will see a blue circle



App operation instructions 10

On the Main tab you can have you RCE Super Capacitor voltage, battery voltage, and temperature.



Do not start the engine until the voltage of Super Capacitors and battery are synced.

Contact us

Reduce Carbon Energy Develop Co.,Ltd.

- Tel:+886-2-2680-1999 ▶ Fax:+886-2-2680-1313
- Address : No.55, Sec. 3, Jiayuan Rd., Shulin Dist., New Taipei City 238, Taiwan (R.O.C.)
- EMAIL : rce168@gmail.com
- Business hours : 0900-1800